


EZ Air Bag Jack

How to use the EZ Air Bag Jack properly:

Before you start using the EZ Air Bag Jack, please carefully study and observe all specifications as well as all additional indications in order to ensure safe use.

Before you use your EZ Air Bag Jack to lift a vehicle, make sure that the lifting points are firmly attached and that only the jack pad bears weight. If any other component bears weight, the top plate can be damaged in the process, which in turn is a source of potential risk. Don't use pointed or sharp objects around the pneumatic bags. Rupturing of the bags can cause the EZ Air Bag Jack to drop its load abruptly and without warning. Always use your EZ Air Bag Jack on solid and flat surfaces, so that the bottom part is parallel to the lifting surface. This will prevent unstable lifting. The upper part and especially the lifting surface of the EZ Air Bag Jack must be kept vertical at all times to prevent lopsided lifting and possible tilting of the load, otherwise the load might topple suddenly, leading to serious injury or even death of the operating personnel.

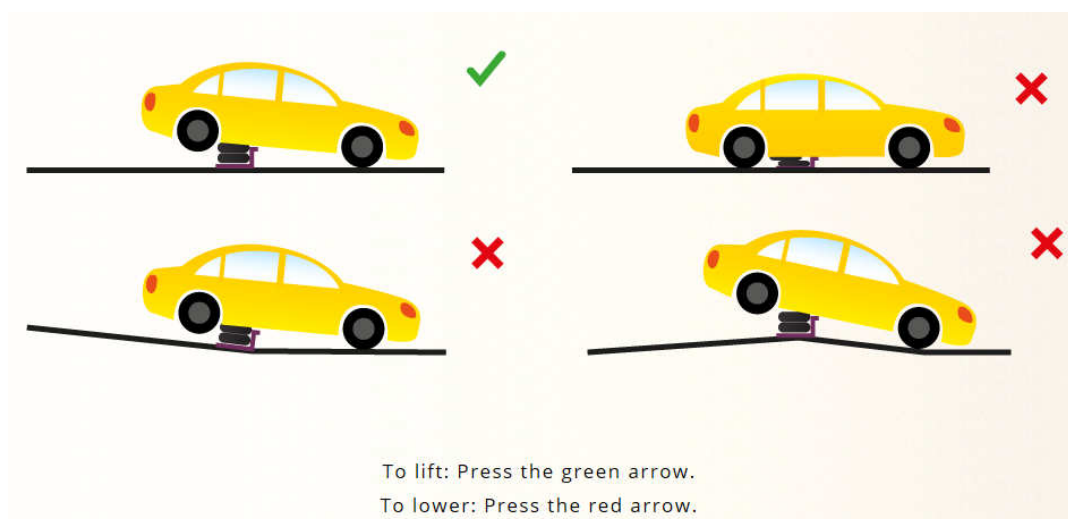

Note: If the airline is disconnected, pressing either the red or the green arrow on the handle will deflate the pneumatic bags.

While using the device, please observe the following Instructions:

- Never exceed the maximum load 4,400 lbs. (2.2 Tons)
- Never inflate in excess of the maximum air pressure 100 PSI (7 bar)
- Only use the EZ Air Bag Jack for lifting purposes; once lifted, use a suitable device to prop up the vehicle
- Use only on flat and hard surfaces
- Always keep your hands well away from the jack pad
- Lift the car only in the areas specified by the vehicle manufacturer
- Only use with the proper accessories provided by the manufacturer and/ or use an adapter
- Always wear safety goggles while using the EZ Air Bag Jack
- Avoid contact with any petroleum products or any type of chemical substance
- Don't use pointed or sharp objects around the pneumatic bags. Rupturing of the bags can cause the EZ Air Bag Jack to drop its load abruptly and without warning, possibly leading to serious injury of operating personnel or damage of property
- Failure to observe the above indications can lead to serious injury of handling personnel or damage of property

Structure and Working Principle of the Easy Air Jack:

The EZ Air Bag Jack is what is commonly known as a pneumatic jack. It consists primarily of the ground plate, an internal stabilizer, pneumatic bags and the top plate with the jack pad. It is a precision lifting device that does not provide power or carry load by itself, but gets its lifting power from pressurized air that an air compressor pumps into the EZ Air Bag Jack.

Structure Information:

Depending on the Bag Jack model, the EZ Air Bag Jack is designed to have one to three tiers with or without extension Handle. In special cases, large-sized pneumatic bags can be employed to fulfill the task at hand, if for example the vehicle that is to be lifted is very heavy.



(Three Tier Air Spring without Handle shown)

Used properly, the pressure in the EZ Air Bag Jack is controlled by adding or reducing air, thereby adding or subtracting from its lifting power. At the same time, its rigidity, height and volume as well as its lifting power will change with inflation and deflation. It will periodically add some flexibility to allow for soft movement of the load, smooth handling and maximum control.

Maintenance:

EZ Air Bag Jack is a low-maintenance product. However, for an optimum performance of your EZ Air Bag Jack, please observe the following suggestions:

- At regular intervals (once a month) put some drops of high-pressure grease on the air inlets.
- Before each use, check the pneumatic bags of the EZ Air Bag Jack for indications of damage, scratching, cuts, leaks or punctures. If you discover any of the above, do not use your EZ Air Bag Jack. Instead, contact the supplier for evaluation.

TUXEDO DISTRIBUTORS LIMITED WARRANTY

Structural Warranty:

The following parts and structural components carry a five year warranty:

Columns	Arms	Uprights	Swivel Pins
Legs	Carriages	Overhead Beam	
Tracks	Cross Rails	Top Rail Beam	

Limited One-Year Warranty:

Tuxedo Distributors, LLC (Tuxedo) offers a limited one-year warranty to the original purchaser of Lifts and Wheel Service equipment in the United States and Canada. Tuxedo will replace, without charge, any part found defective in materials or workmanship under normal use, for a period of one year after purchase. The purchaser is responsible for all shipping charges. This warranty does not apply to equipment that has been improperly installed or altered or that has not been operated or maintained according to specifications.

Other Limitations:

This warranty does not cover:

1. Parts needed for normal maintenance
2. Wear parts, including but not limited to cables, slider blocks, chains, rubber pads and pulleys
3. Replacement of lift and tire changer cylinders after the first 30 days. A seal kit and installation instructions will be sent for repairs thereafter.
4. On-site labor

Upon receipt, the customer must visually inspect the equipment for any potential freight damage before signing clear on the shipping receipt. Freight damage is not considered a warranty issue and therefore must be noted for any potential recovery with the shipping company.

The customer is required to notify Tuxedo of any missing parts within 72 hours. Timely notification must be received to be covered under warranty.

Tuxedo will replace any defective part under warranty at no charge as soon as such parts become available from the manufacturer. No guarantee is given as to the immediate availability of replacement parts.

Tuxedo reserves the right to make improvements and/or design changes to its lifts without any obligation to previously sold, assembled or fabricated equipment.

There is no other express warranty on the Tuxedo lifts and this warranty is exclusive of and in lieu of all other warranties, expressed or implied, including all warranties of merchantability and fitness for a particular purpose.

To the fullest extent allowed by law, Tuxedo shall not be liable for loss of use, cost of cover, lost profits, inconvenience, lost time, commercial loss or other incidental or consequential damages.

This Limited Warranty is granted to the original purchaser only and is not transferable or assignable.

Some states do not allow exclusion or limitation of consequential damages or how long an implied warranty lasts, so the above limitations and exclusions may not apply. This warranty gives you specific legal rights and you may have other rights, which may vary from state to state.

1905 N Main St Suite C, Cleburne, TX 76033
Ph 817-558-9337 / Fax 817-558-9740